



Gigabit Media Converter

User's Manual

Link 10/100/1000BASE-T to 100-/1000-Mbps SFP fiber connections.



Customer Support Information

Order toll-free in the U.S.: Call 877-877-BBOX (outside U.S. call 724-746-5500)
FREE technical support 24 hours a day, 7 days a week: Call 724-746-5500 or fax 724-746-0746
Mailing address: Black Box Corporation, 1000 Park Drive, Lawrence, PA 15055-1018
Web site: www.blackbox.com • E-mail: info@blackbox.com

Trademarks Used in this Manual

Trademarks Used in this Manual

Black Box and the Double Diamond logo are registered trademarks of BB Technologies, Inc.

Microsoft, Windows, and Internet Explorer are registered trademarks of Microsoft Corporation.

Mozilla and Firefox are registered trademarks of the Mozilla Foundation.

Google and Chrome are registered trademarks of Google, Inc.

Any other trademarks mentioned in this manual are acknowledged to be the property of the trademark owners.

We're here to help! If you have any questions about your application or our products, contact Black Box Tech Support at **724-746-5500** or go to **blackbox.com** and click on "Talk to Black Box." You'll be live with one of our technical experts in less than 60 seconds.

Federal Communications Commission and Industry Canada Radio Frequency Interference Statements

This equipment generates, uses, and can radiate radio-frequency energy, and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio communication. It has been tested and found to comply with the limits for a Class A computing device in accordance with the specifications in Subpart B of Part 15 of FCC rules, which are designed to provide reasonable protection against such interference when the equipment is operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference, in which case the user at his own expense will be required to take whatever measures may be necessary to correct the interference.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This digital apparatus does not exceed the Class A limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Règlement sur le brouillage radioélectrique publié par Industrie Canada.

Instrucciones de Seguridad (Normas Oficiales Mexicanas Electrical Safety Statement)

1. Todas las instrucciones de seguridad y operación deberán ser leídas antes de que el aparato eléctrico sea operado.
2. Las instrucciones de seguridad y operación deberán ser guardadas para referencia futura.
3. Todas las advertencias en el aparato eléctrico y en sus instrucciones de operación deben ser respetadas.
4. Todas las instrucciones de operación y uso deben ser seguidas.
5. El aparato eléctrico no deberá ser usado cerca del agua—por ejemplo, cerca de la tina de baño, lavabo, sótano mojado o cerca de una alberca, etc.
6. El aparato eléctrico debe ser usado únicamente con carritos o pedestales que sean recomendados por el fabricante.
7. El aparato eléctrico debe ser montado a la pared o al techo sólo como sea recomendado por el fabricante.
8. Servicio—El usuario no debe intentar dar servicio al equipo eléctrico más allá de lo descrito en las instrucciones de operación. Todo otro servicio deberá ser referido a personal de servicio calificado.
9. El aparato eléctrico debe ser situado de tal manera que su posición no interfiera su uso. La colocación del aparato eléctrico sobre una cama, sofá, alfombra o superficie similar puede bloquear la ventilación, no se debe colocar en libreros o gabinetes que impidan el flujo de aire por los orificios de ventilación.
10. El equipo eléctrico debe ser situado fuera del alcance de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluyendo amplificadores) que producen calor.
11. El aparato eléctrico deberá ser conectado a una fuente de poder sólo del tipo descrito en el instructivo de operación, o como se indique en el aparato.
12. Precaución debe ser tomada de tal manera que la tierra física y la polarización del equipo no sea eliminada.
13. Los cables de la fuente de poder deben ser guiados de tal manera que no sean pisados ni pellizcados por objetos colocados sobre o contra ellos, poniendo particular atención a los contactos y receptáculos donde salen del aparato.
14. El equipo eléctrico debe ser limpiado únicamente de acuerdo a las recomendaciones del fabricante.
15. En caso de existir, una antena externa deberá ser localizada lejos de las líneas de energía.
16. El cable de corriente deberá ser desconectado del cuando el equipo no sea usado por un largo periodo de tiempo.
17. Cuidado debe ser tomado de tal manera que objetos líquidos no sean derramados sobre la cubierta u orificios de ventilación.
18. Servicio por personal calificado deberá ser provisto cuando:
 - A: El cable de poder o el contacto ha sido dañado; u
 - B: Objetos han caído o líquido ha sido derramado dentro del aparato; o
 - C: El aparato ha sido expuesto a la lluvia; o
 - D: El aparato parece no operar normalmente o muestra un cambio en su desempeño; o
 - E: El aparato ha sido tirado o su cubierta ha sido dañada.

Product Safety

WARNING:

To use this product safely, we recommend that you read this appendix before installing and using this product. Failure to follow these precautions and warnings might cause product malfunction, electrical shock, or even fire. If this product is working abnormally (e.g. generating smoke), please stop using this product and contact Black Box Technical Support at 724-746-5500 or info@blackbox.com. DO NOT install this product under conditions listed below:

- DO NOT install this product in an environment with conditions exceeding its specified operating environment.
- DO NOT install this product in an environment that is subjected to direct sunlight or near any heating equipment.
- DO NOT install this product in an environment with extreme temperature changes. Extreme temperature changes, even within the product's operating temperature range, may cause malfunctions.
- DO NOT install this product in a location near any sources of water or liquid.
- DO NOT stack this product with other network devices directly on top of one another. Stacking network devices directly without applying a mounting rack will cause this product to overheat.
- DO NOT install this product on an unstable surface. Doing so might cause this product to fall, resulting in malfunction.

Product Maintenance Guide:

- DO NOT disassemble this product. Doing so might cause malfunction and void your product's warranty.
- We recommend that you keep your product clear of dust. To remove dust from your product, use a dry brush and brush it off gently.
- When not using this product, store it in an environment with low humidity, cool temperature, and free of dust. Failure to do so might cause malfunction.
- Before powering up this product, make sure that the electric power source meets this product's requirement. DO NOT use other power adapters.

Table of Contents

Table of Contents

| | |
|---|----|
| 1. Specifications..... | 7 |
| 2. Overview | 8 |
| 2.1 Introduction..... | 8 |
| 2.2 Features..... | 8 |
| 2.3 What's Included | 8 |
| 2.4 Hardware Description..... | 9 |
| 3. Preparing for Management | 10 |
| 3.1 Preparation for the Web Interface | 10 |
| 3.2 Preparation for the Telnet Interface | 11 |
| 4. Configuration via the Web User Interface | 13 |
| 4.1 Network Information..... | 13 |
| 4.2 Local Setting..... | 13 |
| 4.2.1 IP Configuration..... | 13 |
| 4.2.2 Password Setting..... | 14 |
| 4.2.3 Converter Configuration..... | 14 |
| 4.2.4 Port Configuration..... | 15 |
| 4.2.5 MIB Counter..... | 16 |
| 4.2.6 SNMP Configuration | 16 |
| 4.2.7 VLAN..... | 17 |
| 4.2.8 Q-in-Q..... | 18 |
| 4.2.9 Port Policy | 19 |
| 4.2.10 CoS Policy | 19 |
| 4.3 Remote Setting..... | 20 |
| 4.3.1 802.3ah Function | 20 |
| 4.3.2 Loopback Test..... | 20 |
| 4.3.3 802.3ah Status | 21 |
| 4.4 Tools..... | 21 |
| 4.4.1 System Reboot | 21 |
| 4.4.2 Save and Restore..... | 21 |
| 4.4.3 Firmware Upgrade | 22 |
| 5. Telnet | 23 |
| 5.1 Telnet Overview..... | 23 |
| 5.2 Network Information..... | 23 |
| 5.3 Configure Local | 24 |
| 5.3.1 IP Configuration..... | 24 |
| 5.3.2 Restore Factory Default | 25 |
| 5.3.3 Save Configure | 25 |
| 5.3.4 Reset | 25 |
| 5.4 802.3ah OAM Function..... | 26 |
| 5.4.1 802.3ah Configuration | 26 |
| 5.4.2 Loopback Test..... | 26 |
| 5.5 MIB Counter..... | 27 |
| 5.6 Close Connection | 27 |
| Appendix. IP Configuration for Your PC..... | 28 |

1. Specifications

| | |
|--------------------|---|
| Approvals | Certifications: FCC Class A, CE, EMC safety Class A; Standards: IEEE 802.3a, IEEE 802.3u, IEEE 802.3z, IEEE 802.3x flow control |
| Data Transfer Rate | 2000 Mbps, full-duplex |
| Transmission Media | Twisted-pair: 1000BASE-T CAT5/5e/6 UTP/STP, up to 328 feet (100 m) |
| Connectors | (1) RJ-45, (1) SFP cage |
| Indicators | RJ-45 port: (1) 100 Mbps/Act, 1000 Mbps/Act. LED; SFP port: (1) Link/Act LED; Per unit: (1) Power LED |
| Environment | Temperature Tolerance: Operating: 32 to 122° F (0 to 50° C), Storage: -4 to +194° F (-20 to +90 C); Humidity: 10 to 90%, noncondensing |
| Power | 5-VDC 2A power supply, or powered by USB 2.0 interface; Consumption: 10 watts |
| Dimensions | 0.9"H x 2.9"W x 4"D (2.2 x 7.4 x 10.2 cm) |
| Weight | 0.5 lb. (0.2 kg) |

2. Overview

2.1 Introduction

The Gigabit Media Converter links 10/100/1000BASE-T to 100-/1000-Mbps SFP fiber connections. You can manage it via an intuitive configuration Web page.

This media converter's SFP port supports both Fast Ethernet (155 Mbps) and Gigabit Ethernet (1.25 Gbps) compatible SFP modules. If the media converter's SFP supports dual-speed mode, you can change the unit's transmit rate via the Web configuration user interface (UI).

Table 2-1. SFP port speeds.

| | SFP Type | Single Speed | | Dual Speed |
|---------------------------|----------|--------------|-----------|---------------|
| Web UI | | 100M SFP | 1000M SFP | 100/1000M SFP |
| Port Configuration — Mode | 100 M | √ | | √ |
| | 1000 M | | √ | √ |

Table 2-2. Compatible SFP Modules.

| Product Code | Description |
|--------------|--|
| LFP401 | SFP, 155-Mbps Fiber with Extended Diagnostics, 850-nm Multimode, LC, 2 km |
| LFP402 | SFP, 155-Mbps Fiber with Extended Diagnostics, 1310-nm Multimode, LC, 2 km |
| LFP403 | SFP, 155-Mbps Fiber with Extended Diagnostics, 1310-nm, Single-Mode, LC, 30 km |
| LFP404 | SFP, 155-Mbps Fiber with Extended Diagnostics, 1310-nm Single-Mode, Plus, LC, 60 km |
| LFP411 | SFP, 1.25-Gbps Fiber with Extended Diagnostics, 850-nm Multimode, LC, 300 m |
| LFP412 | SFP, 1.25-Gbps Fiber with Extended Diagnostics, 1310-nm Multimode, LC, 2 km |
| LFP413 | SFP, 1.25-Gbps Fiber with Extended Diagnostics, 1310-nm Single-Mode, LC, 10 km |
| LFP414 | SFP, 1.25-Gbps Fiber with Extended Diagnostics, 1310-nm Single-Mode, LC, 30 km |
| LFP416 | SFP with SGMII Interface, 1.25 Gbps, Copper, 10/100/1000BASE-T, Extended Diagnostics |
| LFP431 | SFP, 155-Mbps/1.25 Gbps Dual-Rate, Single-Fiber Bidirectional, LC |

2.2 Features

- Complies with IEEE 802.3ab 1000BASE-T, IEEE 802.3u 100BASE-BX U, and IEEE 802.3z 1000BASE-BX-U Gigabit Ethernet standards.
- Has one 10/100/1000BASE-T Gigabit Ethernet port and one SFP slot that supports both Fast Ethernet (155 Mbps) and Gigabit Ethernet (1.25 Gbps) compatible SFP modules.
- Twisted-pair port supports full-duplex, auto-MDI/MDI-X, and autonegotiation.
- Web Smart function supports SNMP, 802.1Q VLAN, Q-in-Q, 802.1p CoS, 802.3ahd OAM and HTTP, Ping.
- Provides link loss forwarding and 9.6 K jumbo frame support.


2.3 What's Included

Your package should contain the following items. If anything is missing or damaged, contact Black Box Technical Support at 724-746-5500 or info@blackbox.com.

- 10/100/1000BASE-T to 100-/1000-Mbps SFP Media Converter
- Power adapter
- USB cable

To download this user manual from the Black Box Web site:

- 1. Go to www.blackbox.com
- 2. Enter the part number (LGC220AE) in the search box:

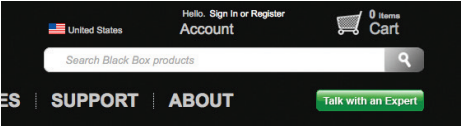

- 3. Click on the "Resources" tab on the product page, and select the document you wish to download.

2.4 Hardware Description

Figure 2-1 shows the 10/100/1000BASE-T to 100-/1000-Mbps SFP Media Converter. Table 2-3 describes its components.



Figure 2-1. Media converter.

Table 2-3. Media converter components.

| Number in Fig. 2-1 | Component | Description |
|---------------------|-----------------|--|
| 1 | RJ-45 connector | Links to 10/100/1000BASE-T device |
| 2 | TP port LEDs | 1000 Mbps and Link/Act LEDs |
| 3 | SFP slot | Houses SFP module |
| 4 | SFP port LEDs | Link/Act LEDs |
| 5 | Power LED | Lights when power is on |
| 6 (on back of unit) | Power connector | Links to optional 5-VDC, 10-watt power supply* |

*The media converter can also be powered by the USB 2.0 interface.

Chapter 3: Preparing for Management

3. Preparing for Management

You can remotely manage this media converter via Telnet® or a Web browser (such as Microsoft® Internet Explorer® or Mozilla® Firefox®) to access and configure the media converter from anywhere on the network.

3.1 Preparation for Web Interface

The Web management page allows you to use a standard web browser (such as Microsoft Internet Explorer, Google® Chrome® or Mozilla Firefox) to access and configure the media converter from anywhere on the network. Before you attempt to use the Web user interface to manage media converter operation, verify that your media converter is properly installed on your network and that every PC on this network can access the media converter via the Web browser.

1. Verify that your network interface card (NIC) is operational, and that your operating system supports TCP/IP protocol.
2. Power up the media converter power and connect your computer to the media converter.
3. The media converter default IP address is 192.168.2.1. The media converter and the connected PC should be located within the same IP Subnet.
4. Change your computer's IP address to 192.168.2.XX or other IP address that is located in the 192.168.2.x subnet (For example: IP Address: 192.168.2.30; Subnet Mask: 255.255.255.0).


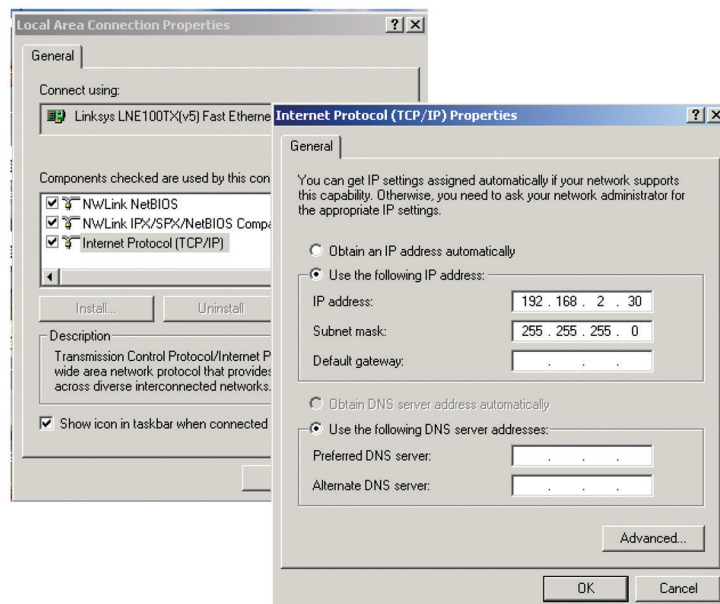


Figure 3-1. TCP/IP screen.

5. Launch the Web browser on the PC.
6. Type `http://192.168.2.1` (or the IP address of the media converter). And then press Enter.
7. The login screen will appear next. See Figure 3-2.

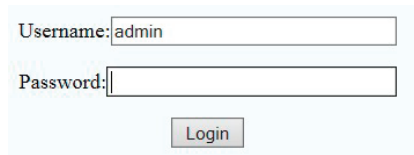

A screenshot of a login interface. It features two input fields: the first is labeled 'Username:' and contains the text 'admin'; the second is labeled 'Password:' and is empty. Below these fields is a button labeled 'Login'.

Figure 3-2. Login screen.

8. Type in the username and password. The default username and password are both admin. The Welcome page appears.

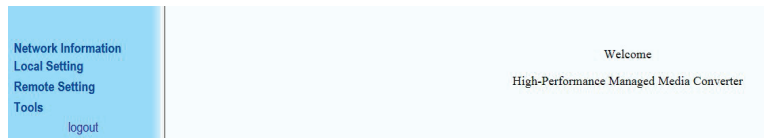


Figure 3-3. Welcome page.

If you can't login to the media converter, the following steps can help you to identify the problem.

1. In DOS command mode, type "ipconfig" to check the NIC's setting. Type the "ping 192.168.2.1" to verify a normal response time.
2. Check the security and firewall settings of your computer.
3. Try a different Web browser.
4. Clear your Web browser's browsing history.

For more information, refer to the Appendix: IP Configuration for Your PC.

3.2 Preparation for Telnet Interface

If your Windows® OS is Win XP, Win 2000 or early version, you can access the Telnet console by the default command. If your OS is Windows 7 or a later version, please download the terminal tool, such as HyperTerminal or Putty.

To connect via Telnet:

1. Go to Start -> Run -> cmd. Then press Enter.
2. Type the telnet 192.168.2.1 address (or the IP address of the media converter). Then press Enter.

Chapter 3: Preparing for Management

Access Telnet with Putty:

1. Open Telnet/PuTTY

Choose Telnet in the Protocol field, and in the Session configuration, enter the Host Name (IP Address of your media converter, default value is 192.168.2.1) and Port number (default Telnet =23, SSH = 22). Then click on "Open" to start the PuTTY session console.

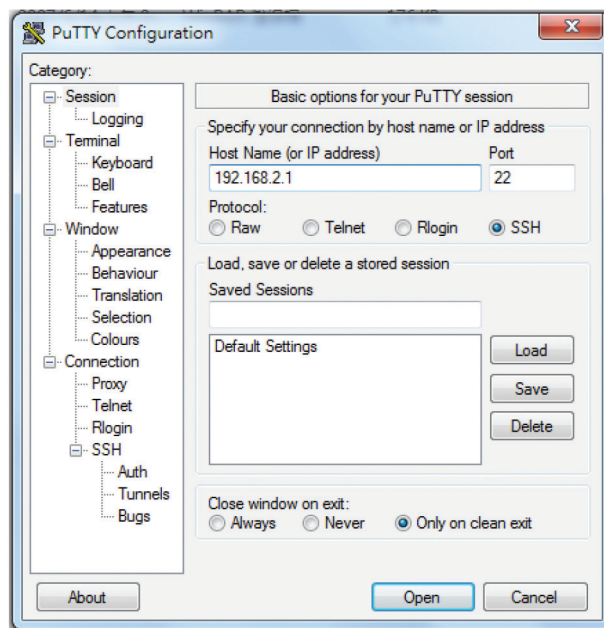


Figure 3-4. PuTTY configuration screen.

After you click on Open, you can see the cipher information in the popup screen. Press Yes to accept the Security Alert.

3. You are now in the media converter's telnet configuration interface.

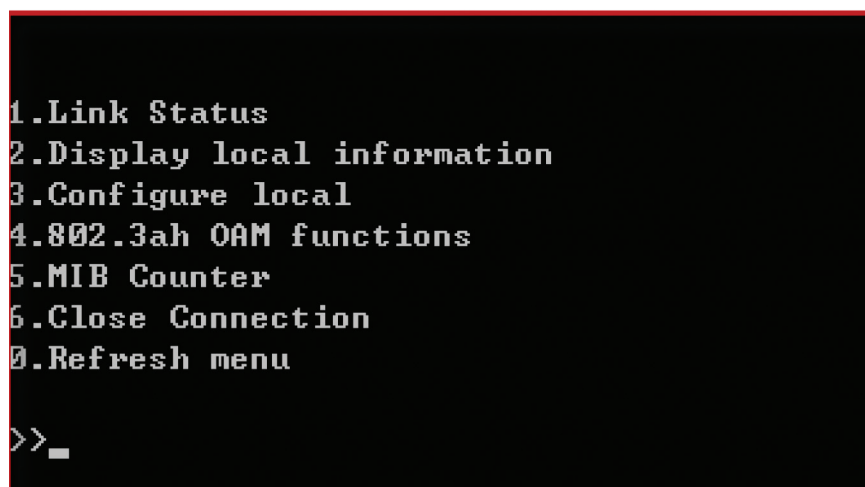


Figure 3-5. Telnet interface screen.

4. Configuration via the Web User Interface

After you login to the media converter's configuration Web page, you can configure the settings or monitor system status. Click the menu button in the left side of the Web page to open the function pages.

4.1 Network Information

| Ports | 1P | FX |
|-------------------|----------|----------|
| Signal detect(SD) | Detected | Detected |
| Link status | On | On |
| Speed | 1000M | 100M |
| Duplex mode | Full | Full |
| Flow control | Enable | Enable |
| Auto negotiation | Enable | Disable |

Figure 4-1. Network Information screen.

You can view system information here in Network Information, including MAC, IP, gateway, subnet mask address, software version, and device description. You can also enable/disable Remote Device Control. If enabled, you can configure the device and view its information remotely.

4.2 Local Setting

You can configure the media converter locally here in the Local Setting.

4.2.1 IP Configuration

| IP Configuration | |
|------------------|---------------|
| DHCP Client | Disable |
| IP Address | 192.168.41.82 |
| Subnet Mask | 255.255.255.0 |
| Gateway | 192.168.41.1 |
| Description | LGC220AE-2 |

Figure 4-2. IP Configuration screen.

This media converter embeds a DHCP client. You can enable/disable this function on this page. If DHCP is disabled, you will have to set the IP, gateway, and subnet mask manually. If DHCP is enabled, the media converter will get a set of IP, subnet mask, and gateway information automatically from the DHCP server. You can also set the description for your media converter here.

4.2.2 Password Setting

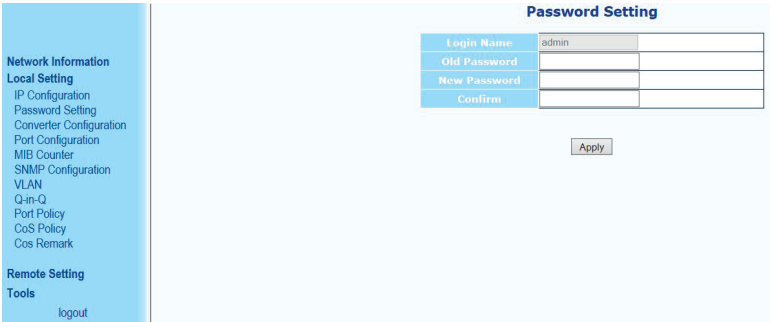


Figure 4-3. Password Setting screen.

You can set a new password for the media converter’s configuration Web page here. The password must be alphanumeric characters (“a” – “z”, “A” – “Z”, “0” – “9”, and “_”) and is case-sensitive. You must input the old password when setting a new password. Press the “Apply” button to apply the changes you’ve made. For security issues, you cannot change the login name.

4.2.3 Converter Configuration

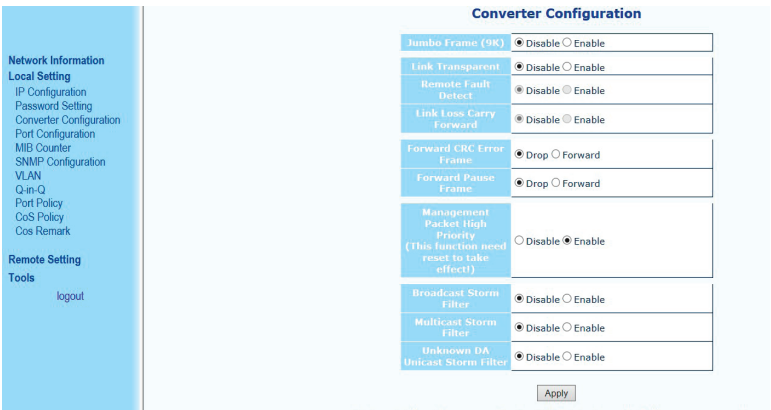


Figure 4-4. Converter configuration screen.

Table 4-1. Converter Configuration screen options.

| Option | Description |
|---|--|
| Jumbo Frame (9K) | Enable this function for Jumbo Frame packet (9K) transmitting. |
| Link Transparent | To enable Remote Fault Detect and Link Loss Carry Forward functions, select this option. |
| Remote Fault Detect | When enabled, the fiber port will be able to receive OAM packets. The media converter will set local RJ-45 port link up/down according to the remote media converter's RJ-45 port's link status. <i>NOTE: The Link Transparent function must be enabled for Remote Fault Detect to take effect.</i> |
| Link Loss Carry Forward | When enabled, the fiber port link will be down when the RJ-45 port link is down, and the fiber port will resume connection when the RJ-45 port's connection is back on. <i>NOTE: The Link Transparent function must be enabled for Link Loss Carry Forward to take effect.</i> |
| Forward CRC Error Frame | Packets with CRC error will still be transmitted if this function is enabled. If this function is disabled, packets with CRC error will be dropped instead. |
| Forward Pause Frame | The media converter will forward pause frames and regard them as normal packets if this function is enabled. |
| Management Packet High Priority | QoS will be enabled if this function is enabled. Four queues will be enabled, and queue 3's priority will be set to "strict." All management packets, such as 802.3ah OAM, SNMP packets will be in queue 3 to guarantee bandwidth. |
| Broadcast Storm Filter, Multicast Storm Filter, Unknown DA Unicast Storm Filter | When too many broadcast/multicast/unknown DA unicast packets arrive in a period time, the media converter will drop these packets if this function is enabled. |

4.2.4 Port Configuration

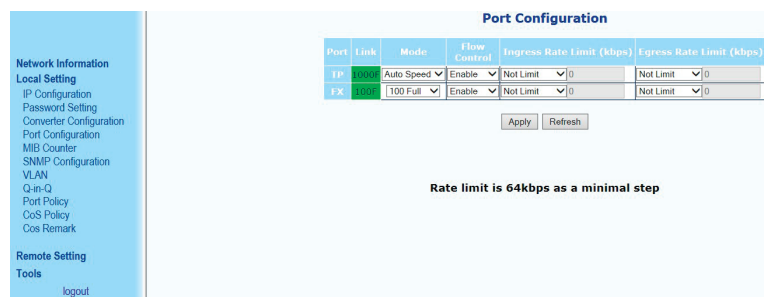


Figure 4-5. Port Configuration screen.

You can set the media converter's port transmitting/receiving rate, flow control function, ingress/egress rate limit on this page. Also, you can set the ingress/egress rate limit.

Chapter 4: Configuration via the Web User Interface

NOTE: The rate limit you set here must be the multiple of 64. If the rate limit you input is not the multiple of 64, it will be set to 64 automatically. Press the “Apply” button to apply all the settings you’ve configured here.

4.2.5 MIB Counters

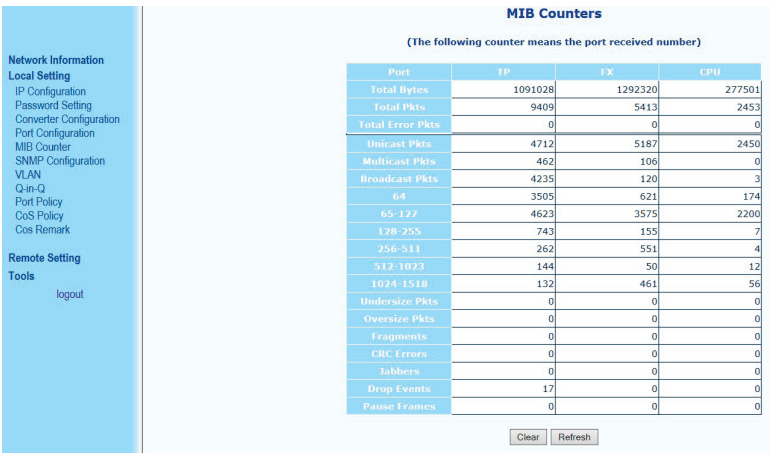


Figure 4-6. MIB Counters screen.

You can view the media converter’s MIB counters in this page. Press the “Clear” button to reset all counters to zero, or press the “Refresh” button to refresh the page.

4.2.6 SNMP Configuration

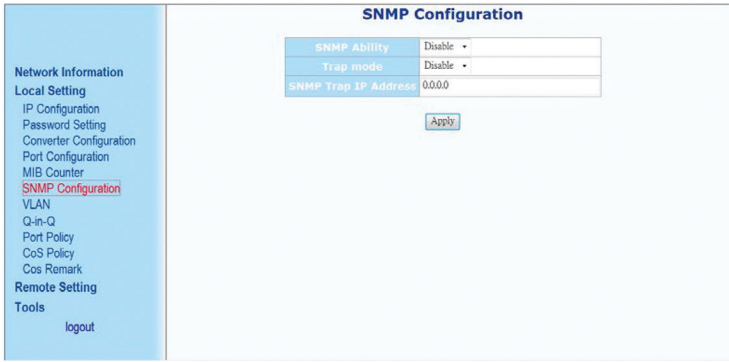


Figure 4-7. SNMP Configuration screen.

You can make SNMP settings on this page.

Table 4-2. SNMP settings.

| Option | Description |
|----------------------|---|
| SNMP Ability | Enable or Disable SNMP functions. |
| Trap Mode | SNMP will send trap event to SNMP server if this function is enabled. |
| SNMP Trap IP Address | SNMP Server IP address. All SNMP trap events will be sent to the IP you set here. |

4.2.7 VLAN

VLAN Group

Figure 4-8. VLAN Group screen.

You can set 16 VLAN entries if this function is enabled. Each VLAN entry contains its VID and member port. Press the “Apply” button to apply all the settings you’ve made here.

VLAN Per Port Setting

Figure 4-9. VLAN Per Port Setting screen.

You can set each port’s PVID and its egress tag behavior on this page.

Table 4-3. VLAN per port settings screen options.

| Egress Link Type | Description |
|------------------|--|
| Replace Tag | The media converter will remove VLAN tags from packets and add new tags. The tag inserted will be the ingress port’s “Default Tag,” which is indexed by port “Port based VLAN index.” This is replacement processing for tagged packets and insertion for untagged packets. |
| Remove Tag | The media converter will remove VLAN tags from packets if these packets are tagged during transmission. The media converter will not modify packets received without tags. |
| Add Tag | The media converter will add VLAN tags to packets if these packets are not tagged during transmission. The media converter will not add tags to packets already tagged. The inserted tag is the ingress port’s “Default tag,” which is indexed by the port’s “Port based VLAN index..” |

Table 4-3 (continued). VLAN per port settings screen options.

| Egress Link Type | Description |
|------------------|---|
| Don't Touch Tag | The media converter will not insert or remove VLAN tags to/from packets transmitting through this port. |
| Port VLAN Entry | Select Port base VLAN index. The number means VLAN table entry index, not VID. |
| Ingress Filter | Enable or disable VLAN ingress filter. |

Press the “Apply” button to apply the settings.

4.2.8 Q-in-Q

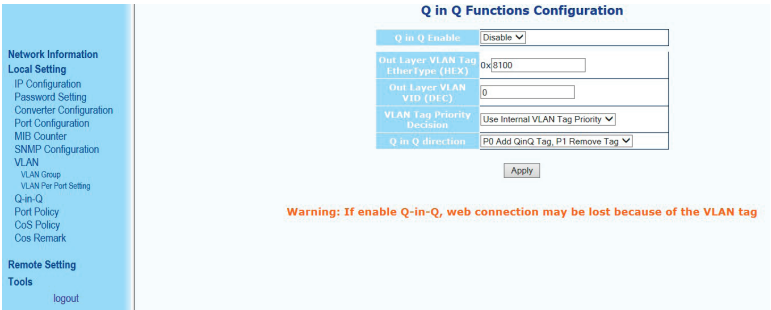


Figure 4-10. Q-in-Q Functions Configuration screen.

You can set the Q-in-Q function on this page.

Table 4-4. Q-in-Q functions.

| Function | Description |
|----------------------------|--|
| Q in Q Enable | Enable/disable the Q-in-Q function. |
| Out Layer VLAN Tag | User defined Q-in-Q out layer VLAN tag Ether type. |
| Out Layer VLAN VID | User defined Q-in-Q out layer VLAN tag VID. |
| VLAN Tag Priority decision | Decide layer VLAN Tag’s priority, use internal VLAN tag’s priority or remark 802.1p decision priority. |
| Q in Q direction | Select Q in Q direction, which port adds tag, and which port removes tag. |

Press the “Apply” button to apply the settings.

4.2.9 Port Policy

| Port | Output Queue |
|------|--------------|
| 0 | 0 |
| 1 | 1 |
| 2 | 2 |

Apply

Figure 4-11. Port to Queue screen.

You can set the priorities of each physical port here in this page. When a packet without VLAN tag is received from the connection port, it will be handled according to the priority value you set here. Press the “Apply” button to apply the settings.

4.2.10 CoS Policy

Remark-Remote

Remark: Disable

Apply

Figure 4-12. CoS policy screen.

Each port of the media converter contains four queues. Queue 3 has the highest priority, while queue 0 has the lowest priority. When receiving VLAN and IEEE 802.1p priority tagged packets, the media converter will handle these packets accordingly.

Press the “Apply” button to apply the settings.

4.3 Remote Setting
4.3.1 802.3ah Function
802.3ah Configuration

Network Information

Local Setting

IP Configuration

Password Setting

Converter Configuration

Port Configuration

MIB Counter

SNMP Configuration

VLAN

VLAN Group

VLAN Per Port Setting

Q-in-Q

Port Policy

CoS Policy

Cos Remark

Remote Setting

802.3ah Functions

802.3ah Configuration

Loopback Test

802.3ah Status

Tools

logout

802.3ah OAM Configuration

| | | |
|------------------|--|---|
| 802.3ah Function | <input type="radio"/> Disable | <input checked="" type="radio"/> Enable |
| 802.3ah Mode | <input checked="" type="radio"/> Passive | <input type="radio"/> Active |
| Remote Loopback | <input type="radio"/> Disable | <input checked="" type="radio"/> Enable |

Apply

802.3ah Status

| | |
|-------------------|--------------|
| Discovery Status | PASSIVE_WAIT |
| Fiber Port Status | NORM FWD |

Refresh

Provision

Apply

Figure 4-13. 802.3ah Configuration screen.

You can set 802.3ah OAM in this page. Enable/disable 802.3ah function and set its mode as passive or active mode. Press the “Apply” button to apply the settings.

4.3.2 Loopback Test

Network Information

Local Setting

IP Configuration

Password Setting

Converter Configuration

Port Configuration

MIB Counter

SNMP Configuration

VLAN

VLAN Group

VLAN Per Port Setting

Q-in-Q

Port Policy

CoS Policy

Cos Remark

Remote Setting

802.3ah Functions

802.3ah Configuration

Loopback Test

802.3ah Status

Tools

logout

802.3ah Loop Back Test

| | | |
|--------------------------------|----|-----------|
| Send Packet Number | 16 | (1~255) |
| Packet Length(Not include CRC) | 60 | (60~1514) |

Apply

Figure 4-14. 802.3ah Loopback test.

You can start 802.3ah loopback test here on this Web page, with the number of packets and packet length value you set. Press the “Apply” button to apply the settings.

4.3.3 802.3ah Status

You can view IEEE 802.3ah status on this Web page.

| Network Information Local Setting IP Configuration Password Setting Converter Configuration Port Configuration MIB Counter SNMP Configuration VLAN VLAN Group VLAN Per Port Setting Qin-Q Port Policy CoS Policy CoS Remark Remote Setting 802.3ah Functions 802.3ah Configuration Loopback Test 802.3ah Status Tools logout | 802.3ah Status Information | |
|---|----------------------------|-------------------|
| | Global Config | |
| | Function Enable | ENABLED |
| | Fiber Port State | NORM FWD |
| | Local DTE MAC | 00-03-CE-16-E1-4A |
| | Flags Field | |
| | Local | Remote |
| | Remote Stable | FALSE |
| | Remote Evaluating | FALSE |
| | Local Stable | FALSE |
| | Local Evaluating | FALSE |
| | Critical Event | FALSE |
| | Dying Gasp | FALSE |
| | Link Fault | FALSE |

Figure 4-15. IEEE 802.3ah status screen.

4.4 Tools

4.4.1 System Reboot

Press the "System Reboot" button to restart the system. All settings will be kept.

4.4.2 Save and Restore

| Network Information Local Setting IP Configuration Password Setting Converter Configuration Port Configuration MIB Counter SNMP Configuration VLAN VLAN Group VLAN Per Port Setting Qin-Q Port Policy CoS Policy CoS Remark Remote Setting 802.3ah Functions 802.3ah Configuration Loopback Test 802.3ah Status Tools System Reboot | Configuration Setting | |
|--|--|--|
| | Press the "SaveToFlash" button, all current configuration will save to converter as backup. | |
| | <input type="button" value="SaveToFlash"/> | |
| | Press the "LoadFromFlash" button,the Web Interface may be disconnected for restore to previous backup configuration. | |
| | <input type="button" value="LoadFromFlash"/> | |
| | Press the "ResetToFactory" button,the Web Interface will disconnected. After reset all configuration, the system will back to factory default mode. The default IP address is 192.168.2.1 . | |
| | <input type="button" value="ResetToFactory"/> | |
| | | |
| | | |
| | | |

Figure 4-16. Configuration Setting screen.

Table 4-5. Save and Restore settings.

| Setting | Description |
|---------|--|
| Backup | Save all the settings of the media converter to a file. |
| Restore | Restore all the settings of the media converter from a pre-saved configuration file. |
| Factory | Set all parameters to the factory default value. |

4.4.3 Firmware Upgrade

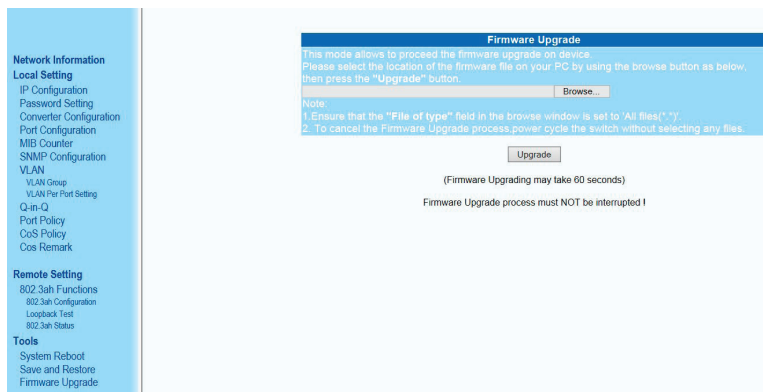


Figure 4-17. Firmware Upgrade screen.

You can update the media converter's firmware in this Web page. Press the "Browse..." button to select the firmware from your PC, then press the "Upgrade" button to start updating the firmware.

NOTE: It might take 60 seconds to update the firmware. Do not interrupt this process or your media converter might malfunction.

5. Telnet

Telnet provides another way to configure your media converter.

5.1 Telnet Overview

```
1.Link Status
2.Display local information
3.Configure local
4.802.3ah OAM functions
5.MIB Counter
6.Close Connection
0.Refresh menu

>>_
```

Figure 5-1. Telnet screen.

As mentioned in Chapter 3, Preparing for Management, telnet provides another way to configure your media converter if your PC doesn't have access to a Web page. To make configurations or view system status, input the number of the option you would like to perform. If you're having trouble connecting to the configuration interface via telnet, refer to Section 3.2, Preparation for Telnet Interface.

5.2 Network Information

```
>>1
Port                Status
Local fiber:        Link Down
Local UTP:           1000M Full

>>2
Local Infomation<software version 1.5.3>:
mac 00:03:CE:11:B8:73
ip 192.168.2.1
gateway 192.168.2.254
netmask 255.255.255.0
Device name: RTL8213M_DEMO
DHCP client is disabled

>>_
```

Figure 5-2. Network Information screen.

You can view your media converter's port link status by typing "1" in the telnet interface. To view other status/information, type "2" in the telnet interface. Information displayed here includes MAC, IP, gateway, subnet mask address, software version number, and device description.

5.3 Configure Local

```
1.Link Status
2.Display local information
3.Configure local
4.802.3ah OAM functions
5.MIB Counter
6.Close Connection
0.Refresh menu

>>3

1.Configure local IP address
2.Restore Factory Set
3.Save Configure
4.Reset
0.Refresh menu,[ESC] above level menu
```

Figure 5-3. Configure Local screen.

To enter the “Configure Local” sub-menu, type “3” in the telnet interface. To refresh the menu, type “0” in the telnet interface. To leave this sub-menu, press the escape key on your keyboard.

5.3.1 IP Configuration

```
1.Link Status
2.Display local information
3.Configure local
4.802.3ah OAM functions
5.MIB Counter
6.Close Connection
0.Refresh menu

>>3

1.Configure local IP address
2.Restore Factory Set
3.Save Configure
4.Reset
0.Refresh menu,[ESC] above level menu
1
Input local IP address(x.x.x.x) >>_
```

Figure 5-4. IP Configuration screen.

You can set the media converter’s IP address by typing “1” in the “Configure Local” sub-menu. After you type “1”, the system will prompt you to input the IP address in the format of “X.X.X.X”

5.3.2 Restore Factory Default

```
1.Configure local IP address
2.Restore Factory Set
3.Save Configure
4.Reset
0.Refresh menu,[ESC] above level menu
2
Restore Factory Default Configure? (y or n) >>_
```

Figure 5-5. Restore Factory Default screen.

To reset the media converter's settings to their default values, type "2" in the "Configure Local" sub-menu.

5.3.3 Save Configure

```
1.Configure local IP address
2.Restore Factory Set
3.Save Configure
4.Reset
0.Refresh menu,[ESC] above level menu
```

Figure 5-6. Save Configure screen.

To save your media converter's current settings, type "3" in the "Configure Local" sub-menu.

5.3.4 Reset

```
1.Configure local IP address
2.Restore Factory Set
3.Save Configure
4.Reset
0.Refresh menu,[ESC] above level menu
```

Figure 5-7. Reset screen.

To reboot your media converter, type "4" in the "Configure Local" sub-menu.

5.4 802.3ah OAM Function

To enter the “802.3ah OAM Function” sub-menu, type “4” in the telnet interface. To refresh the menu, type “0” in the telnet interface. To leave this sub-menu, press the escape key on your keyboard.

5.4.1 802.3ah Configuration

```
>>4
1.Config OAM
2.Start loopback
3.Configure remote OAM
0.Refresh menu,[ESC] above level menu

>>1
Enable 802.3ah? <y or n>>y
Select active mode or passive mode? <1: active, 2: passive>>2
OAM init success.
>>
```

Figure 5-8. 802.3ah Configuration screen.

You can configure IEEE 802.3ah OAM function as shown in the figure above.

5.4.2 Loopback Test

```
1.Link Status
2.Display local information
3.Configure local
4.802.3ah OAM functions
5.MIB Counter
6.Close Connection
0.Refresh menu

>>4
1.Config OAM
2.Start loopback
3.Configure remote OAM
0.Refresh menu,[ESC] above level menu

>>2
802.3ah OAM loopback start
```

Figure 5-9. Loopback test screen.

Start the loopback test here as shown in the figure above.

5.5 MIB Counter

To view the media converter's MIB counters, type "5" in the telnet interface.

```
>>5
[MIB Counter Info]
```

| | Port0 | Port1 | Port2 |
|----------------|------------|------------|------------|
| ifInUcastPkts | 0X00000063 | 0X00000000 | 0X00000047 |
| UndersizePkts | 0X00000000 | 0X00000000 | 0X00000000 |
| Fragments | 0X00000000 | 0X00000000 | 0X00000000 |
| Pkts64 | 0X000000B7 | 0X00000000 | 0X00000032 |
| Pkts65to127 | 0X000000F2 | 0X00000000 | 0X0000000A |
| Pkts128to255 | 0X0000002F | 0X00000000 | 0X0000000C |
| Pkts256to511 | 0X00000009 | 0X00000000 | 0X00000000 |
| Pkts512to1023 | 0X0000001B | 0X00000000 | 0X00000000 |
| Pkts1024to1518 | 0X00000000 | 0X00000000 | 0X00000000 |
| OversizePkts | 0X00000000 | 0X00000000 | 0X00000000 |
| Jabbers | 0X00000000 | 0X00000000 | 0X00000000 |
| MulticastPkts | 0X000000D4 | 0X00000000 | 0X00000000 |
| BroadcastPkts | 0X000000C5 | 0X00000000 | 0X00000001 |
| DropEvents | 0X00000000 | 0X00000000 | 0X00000000 |
| PortInDiscards | 0X00000000 | 0X00000000 | 0X00000000 |
| FCSErrors | 0X00000000 | 0X00000000 | 0X00000000 |
| SymbolErrors | 0X00000000 | 0X00000000 | 0X00000000 |
| UnknownOpCodes | 0X00000000 | 0X00000000 | 0X00000000 |
| InPauseFrames | 0X00000000 | 0X00000000 | 0X00000000 |

Figure 5-10. MIB Counter screen.

5.6 Close Connection

To disconnect the telnet connection, type "6" in the telnet interface.

Appendix. IP Configuration for Your PC

This appendix describes how to set the IP address of your PC so you can connect to the configuration Web page. The configuration Web page allows you to set system variables or monitor system status. The following section will show you how to set the IP address properly in a Microsoft Windows 8 environment. Setting IP address in other Microsoft operating system (such as Windows Vista® or Windows 7) is similar.

1. Open "Network and Sharing Center" in Control Panel, and click on "Change adapter settings" as shown in Figure A-1.

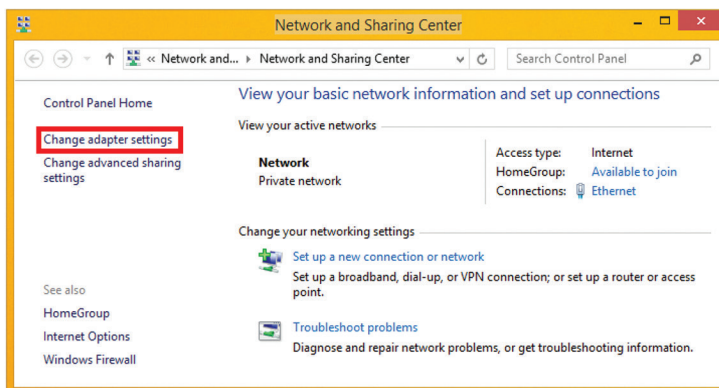


Figure A-1. Change adapter settings option.

2. A "Network Connections" window will pop up, showing all the network connections available on your PC. Double-click on the network connection you are using to connect the media converter.

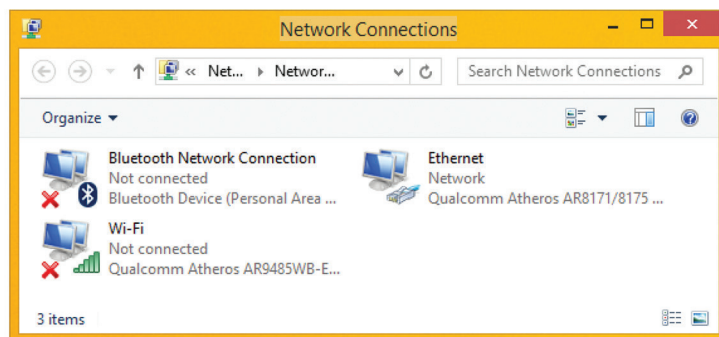


Figure A-2. Network Connections screen.

3. An Ethernet Status window will pop up. Click on the Properties button as shown in Figure A-3.

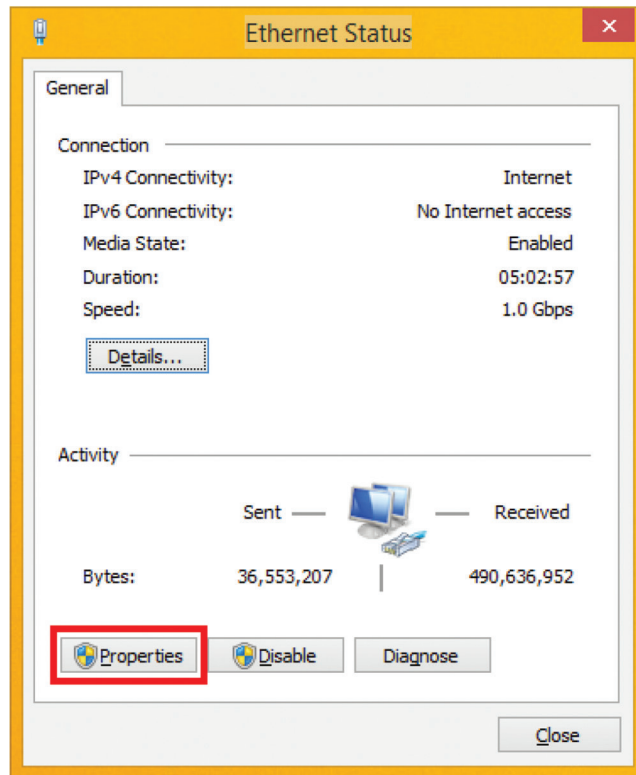


Figure A-3. Ethernet status screen.

4. An Ethernet Properties window will pop up. Double click on the Internet Protocol Version 4 (TCP/IPv4).

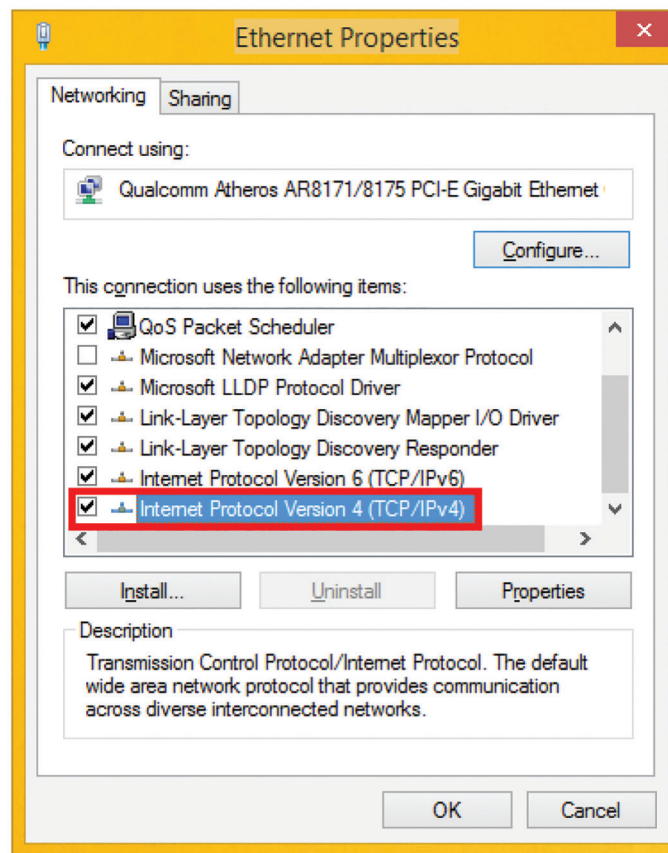


Figure A-4. Select Internet Protocol Version 4 (TCP/IPv4).

5. An Internet Protocol Version 4 (TCP/IPv4) Properties window will pop up. Set your PC's IP address and subnet mask as shown in Figure A-5.

By default, your product's IP address should be 192.168.2.1. You can set any IP address for your PC as long as it's not the same as your media converter's IP address and is in the same network segment as your media converter's IP address. Press OK to apply the TCP/IPv4 settings. Connect to your media converter using a Web browser (i.e. Internet Explorer, Chrome, or Firefox).

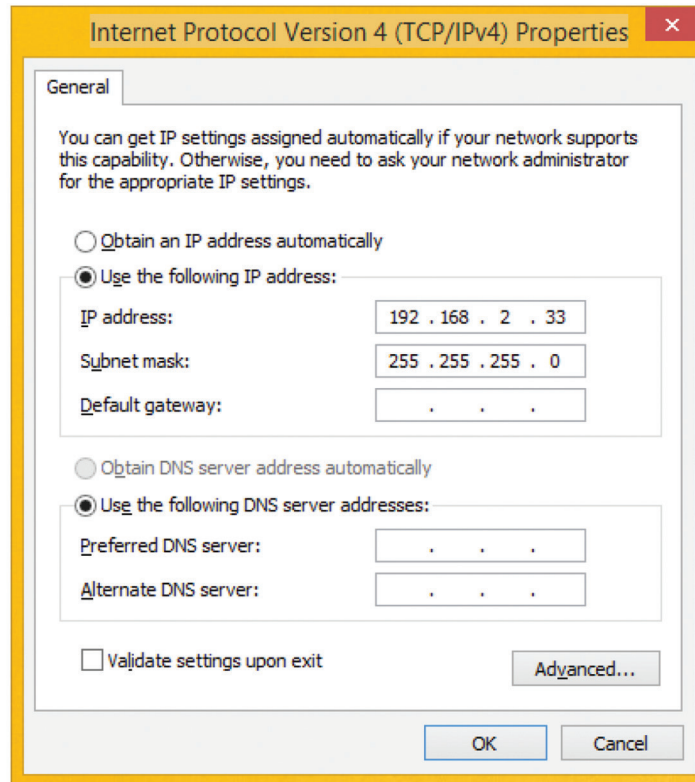


Figure A-5. Internet Protocol Version 4 Properties screen.

Black Box Tech Support: FREE! Live. 24/7.

Tech support the
way it should be.



Great tech support is just 60 seconds away at 724-746-5500 or blackbox.com.



About Black Box

Black Box provides an extensive range of networking and infrastructure products. You'll find everything from cabinets and racks and power and surge protection products to media converters and Ethernet switches all supported by free, live 24/7 Tech support available in 60 seconds or less.

© Copyright 2014. Black Box Corporation. All rights reserved. Black Box® and the Double Diamond logo are registered trademarks of BB Technologies, Inc. Any third-party trademarks appearing in this manual are acknowledged to be the property of their respective owners.

LGC220AE user manual, version 1

724-746-5500 | blackbox.com